

Prowler Upper Suspension Frame Brace Instructions:

WARNING


Modification of your vehicle with the parts identified below may alter its stock performance; the buyer hereby expressly assumes all risks associated with any such modification.

DISCLAIMER OF WARRANTY

Seller disclaims any warranty express or implied with respect to the parts sold hereby whether as to merchantability, fitness for particular purpose, or any other matter. IPS assumes no liability expressed or implied for the improper installation or use of this product or its components. IPS is NOT responsible for any damage, consequential or otherwise for equipment failure after installation.

Part 1: Installing the top suspension frame brace

1. Start by opening the hood. Remove the top innermost bolts on both sides that hold the front bumpers to the frame, see picture 1. Save the nuts, as they will be used for the installation of the new suspension brace.

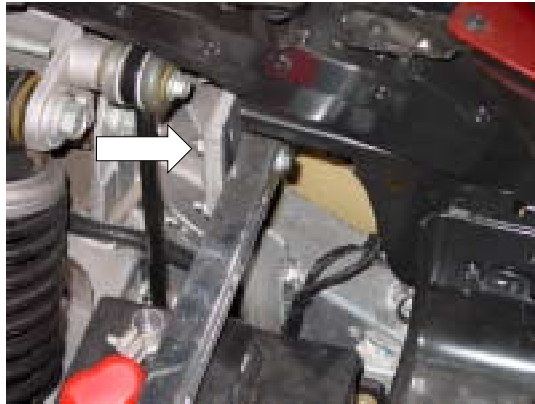

Picture 1

2. The brace can be installed with either the Kat facing up or down, and should be installed as shown in picture 1.
3. Using the supplied bolts and washers, mount the Brace with the bolts through the holes on the suspension brace so that the brace will be mounted on the front side of frame bracket. Use the nuts that were removed from the stock bolts and securely tighten the nuts and bolts on both sides
4. The top suspension brace is now installed. After installing the bolts make sure that the brace is tight and secure.